

Autonics High Accuracy PID Temperature Controller TK4 SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics product.
Please read the following safety considerations before use.

Safety Considerations

※Please observe all safety considerations for safe and proper product operation to avoid hazards.
※⚠ symbol represents caution due to special circumstances in which hazards may occur.

- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.

Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use.** Failure to follow this instruction may result in electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.** Failure to follow this instruction may result in electric shock or fire.
- Check "Connections" before wiring.** Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.** Failure to follow this instruction may result in electric shock or fire.

Caution

- When connecting the power input and relay output, use AWG 20 (0.50mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74~0.90Nm.** When connecting the sensor input and communication cable without dedicated cable, use AWG 28~26 cable or over and tighten the terminal screw with a tightening torque of 0.74~0.90Nm. Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.** Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.** Failure to follow this instruction may result in electric shock or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.** Failure to follow this instruction may result in fire or explosion.
- Keep metal chip, dust, and wire residue from flowing into the unit.** Failure to follow this instruction may result in fire or product damage.

Ordering Information

| | | | | | | |
|-----------------------------------|-------------------|----------------------------------|--|--|---|---|
| TK | 4 | N | -1 | 4 | R | N |
| OUT2 control output ¹⁾ | Standard | N | None | ※Select in case of standard control (heating or cooling) | | |
| OUT1 control output ²⁾ | Heating & Cooling | R | Relay output | | | |
| Power supply | S ³⁾ | C | Current output or SSR drive output selectable | | | |
| | 2 ⁵⁾ | 4 | 100-240VAC 50/60Hz | | | |
| | 1 | 2 | Standard | Alarm output 1+CT input ¹⁾ | | |
| | N | D | Standard | Alarm output 1+Alarm output 2 | | |
| | R | T | Standard | Alarm output 1+Digital input (DI-1, DI-2) | | |
| | S | M | Standard | Alarm output 1+Transmission output | | |
| | W | A | Standard | Transmission output | | |
| | L | B | Standard | Alarm output 1+RS485 communication output | | |
| | D | A | Standard | RS485 communication output | | |
| | SP | 1 | Alarm output 1 | | | |
| | S | 2 | Alarm output 1+Alarm output 2 | | | |
| | M | R | Alarm output 1+Transmission output | | | |
| | W | T | Alarm output 1+RS485 communication output | | | |
| | L | A | Alarm output 1+Alarm output 2+Transmission output | | | |
| | H | B | Alarm output 1+Alarm output 2+RS485 communication output | | | |
| | L | D | Alarm output 1+Alarm output 2+Digital input (DI-1, DI-2) ¹⁾ | | | |
| | N | | DIN W48×H24mm | | | |
| | SP | | DIN W48×H48mm (11pin plug type) ¹⁾ | | | |
| | S | | DIN W48×H48mm (terminal block type) | | | |
| | M | | DIN W72×H72mm | | | |
| | W | | DIN W96×H48mm | | | |
| | H | | DIN W48×H96mm | | | |
| | L | | DIN W96×H96mm | | | |
| | 4 | | 9999 (4-digit) | | | |
| Item | TK | Temperature / Process Controller | | | | |

- In case of TK4N/SP Series, option control selection and digital input will be limited due to number of terminals.
- "S" represents SSR drive output support models which SSR function (standard ON/OFF, cycle, phase) control are available. "C" represents selectable current and SSR drive output support models.
- Select "R" or "C" type in case of using heating/cooling control and "N" type in case of using standard control.
- Does not support in AC/DC voltage type model.
- Does not support in TK4N.
- The CT input model of TK4N is selectable only for standard model which has alarm output 1.
- The heating/cooling model of TK4N-1□□□ has only alarm output 2.
- Only for TK4S-D□□□, OUT2 output terminal is used as DI-2 input terminal.
- 11Pin socket (PG-11, PS-11(N)) for TK4SP: sold separately.


※Shaded descriptions are upgraded or added functions from the before TK Series.
※The above specifications are subject to change and some models may be discontinued without notice.
※Be sure to follow cautions written in the instruction manual, user manual and the technical descriptions (catalog, homepage).

Specifications

| Series | TK4N | TK4SP | TK4S | TK4M | TK4W | TK4H | TK4L |
|--|--|---|--|-----------------------------|-----------------------------|-----------------------------|-------------|
| Power supply | AC voltage | 100-240VAC~50/60Hz | — | — | — | — | — |
| Allowable voltage range | AC/DC voltage | — | 24VAC~50/60Hz, 24-48VDC= | — | — | — | — |
| Power consumption | AC voltage | Max. 6VA | Max. 8VA | Max. 8VA | Max. 8VA | Max. 8VA | Max. 8VA |
| Display method | AC/DC voltage | — | Max. 8VA (24VAC 50/60Hz), max. 5W (24-48VDC) | — | — | — | — |
| Character size | 7-segment (PV: red, SV: green, other display part: green, yellow, red) LED method | 4.5×7.2mm | 7.0×14.0mm | 9.5×20.0mm | 8.5×17.0mm | 7.0×14.6mm | 11.0×22.0mm |
| Input type | PV (W+H) | — | — | — | — | — | — |
| Display accuracy | SV (W+H) | — | — | — | — | — | — |
| Control output | RTD | JPT 100Ω, DPT 100Ω, DPT 50Ω, Cu 100Ω, Cu 50Ω, NiKel 120Ω (6 types) | — | — | — | — | — |
| Alarm output | Thermocouple | K, J, E, T, L, N, U, R, S, B, C, G, PLII (13 types) | — | — | — | — | — |
| Option output | Analog | Voltage: 0-100mVDC=, 0-5VDC=, 1-5VDC=, 0-10VDC= (4 types) Current: 0-20mA, 4-20mA (2 types) | — | — | — | — | — |
| Control method | RTD | AI room temperature (23°C ±5°C); (PV ±0.3% or ±1°C, select the higher one) ±1-digit ¹⁾ Out of room temperature ranges: (PV ±0.5% or ±2°C, select the higher one) ±1-digit In case of TK4SP Series, ±1°C will be added. | — | — | — | — | — |
| Relay | Thermocouple | AI room temperature (23°C ±5°C); (PV ±0.3% F.S. ±1-digit) Out of room temperature ranges: ±0.5% F.S. ±1-digit | — | — | — | — | — |
| SSR | Analog | CT input ±5% F.S. ±1-digit | — | — | — | — | — |
| DC/4-20mA or DC/0-20mA selectable (resistance load: max. 500Ω) | Relay | OUT1, OUT2: 250VAC~3A, 30VDC=3A, 1a | — | — | — | — | — |
| Max. 11VDC=±2V 20mA | SSR | Max. 11VDC=±2V 20mA | — | — | — | — | — |
| Relay output | Current | DC/4-20mA or DC/0-20mA selectable (resistance load: max. 500Ω) | — | — | — | — | — |
| Alarm output | Communication | AL1, AL2: 250VAC~3A 1a ※TK4N AL2: 250VAC~0.5A, 1a (max. 125VA), TK4SP has only AL1 | — | — | — | — | — |
| Transmission | CT | DC/4-20mA (resistance load: max. 500Ω, output accuracy: ±0.3% F.S.) | — | — | — | — | — |
| RS485 communication output (Modbus RTU) | Relay | 0.0-50.0A (primary heater current reading range) ※CT ratio is 1/1000 (except TK4SP) | — | — | — | — | — |
| Option input | Digital input | Contact input: ON - max. 2kΩ, OFF - min. 90kΩ Non-contact input: ON - residual voltage max. 1.0VDC=, OFF - leakage current max. 0.1mA Outflow current: approx. 0.5mA per input ※TK4SM: 1 (TK4S-D□□□), 2, TK4SP: none, TK4N/H/W/L: 2 (except TK4SP) | — | — | — | — | — |
| Control method | Heating, Cooling | ON/OFF, P, PI, PD, PID control mode | — | — | — | — | — |
| Heating & Cooling | Proportional band (P) | RTD/Thermocouples: 1 to 100°C/F (0.1 to 100.0°C/F) variable - Analog: 1 to 100-digit | — | — | — | — | — |
| Integral time (I) | 0.1 to 999.9°C/F (0.1 to 999.9%) | — | — | — | — | — | — |
| Derivative time (D) | 0 to 9999 sec | — | — | — | — | — | — |
| Control period (T) | 0 to 9999 sec | — | — | — | — | — | — |
| Manual reset value | Relay output, SSR drive output: 0.1 to 120.0 sec Current output+SSR drive output: 1.0 to 120.0 sec | — | — | — | — | — | — |
| Sampling period | 0.0 to 100.0% | — | — | — | — | — | — |
| 50ms | Dielectric strength | 2,000VAC 50/60Hz for 1 min (between power source terminal and input terminal) | — | — | — | — | — |
| Vibration | 0.75mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours | — | — | — | — | — | — |
| Relay life cycle | Mechanical | OUT1/OUT2: min. 5,000,000 operations, AL1/AL2: min. 20,000,000 operations (TK4H/W/L: min. 5,000,000 operations) | — | — | — | — | — |
| Electrical | OUT1/OUT2, AL1/AL2: min. 100,000 operations | — | — | — | — | — | — |
| Insulation resistance | Over 100MΩ (at 500VDC megger) | — | — | — | — | — | — |
| Noise immunity | Square shaped noise by noise simulator (pulse width 1μs) ±2kV R-phase, S-phase | — | — | — | — | — | — |
| Memory retention | Approx. 10 years (non-volatile semiconductor memory type) | — | — | — | — | — | — |
| Environment | Ambient temp. | -10 to 50°C, storage: -20 to 60°C | — | — | — | — | — |
| Humidity | 35 to 85%RH, storage: 35 to 85%RH | — | — | — | — | — | — |
| Protection | IP65 (front panel) ※TK4SP: IP50 (front panel) | — | — | — | — | — | — |
| Insulation type | Double insulation or reinforced insulation (mark: □, dielectric strength between the measuring input part and the power part: 2kV) | — | — | — | — | — | — |
| Approval | CE, RoHS | — | — | — | — | — | — |
| Weight ¹⁾ | Approx. 140g (approx. 70g) | Approx. 130g (approx. 85g) | Approx. 150g (approx. 105g) | Approx. 210g (approx. 140g) | Approx. 211g (approx. 141g) | Approx. 294g (approx. 198g) | — |


- At room temperature range (23°C±5°C):
 - Thermocouple K, J, T, N, E type, below -100°C / Thermocouple L, U, PLII, Cu50Ω, DPT 50Ω: (PV ±0.3% or ±2°C, select the higher one) ±1-digit
 - Thermocouple C, G, R, S type, below 200°C: (PV ±0.3% or ±3°C, select the higher one) ±1-digit
 - Thermocouple B type, below 400°C: there is no accuracy standards.
 - Out of room temperature range:
 - RTD Cu50Ω, DPT50Ω: (PV ±0.5% or ±3°C, select the higher one) ±1-digit
 - Thermocouple R, S, B, C, G type: (PV ±0.5% or ±5°C, select the higher one) ±1-digit
 - Others, below -100°C: within ±5°C
- In case of TK4SP Series, ±1°C will be added to the degree standard.
※The weight includes packaging. The weight in parenthesis is for unit only.
※Environment resistance is rated at no freezing or condensation.

Unit Description

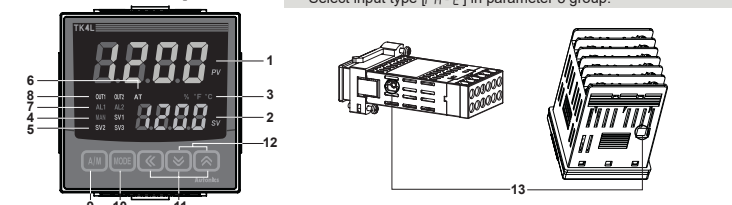


- Measured value (PV) display part:** RUN mode: It displays currently measured value (PV). Setting mode: It displays the parameter.
- Set value (SV) display part:** RUN mode: It displays the set value (SV). Setting mode: It displays the set value of the parameter.
- Unit (%C/F%) indicator:** It displays the unit set at display unit [unit] in parameter 3 group. (In case of TK4N, % is not supported).
- Manual control indicator:** It turns ON during manual controlling.
- Multi SV indicator:** One of SV1 to 3 lamps will be ON in case of selecting multi SV function.
- Auto tuning indicator:** It flashes by 1 sec. when executing auto tuning.
- Alarm output (AL1, AL2) indicator:** It turns ON when the alarm output is ON.
- Control output (OUT1, OUT2) indicator:** It turns ON when the control output is ON.
 - ※During cycle/phase controlling in SSRP function model (TK4□□4S□□), when MV is over 5.0%, it turns ON.
 - ※To use current output, when MV is 0.0% in manual control, it turns OFF. Otherwise, it always turns ON.
 - When MV is over 3.0% in auto control, it turns ON and when MV is below 2.0%, it turns OFF.
- Key:** It is used when switching auto control to manual control.
- TK4N/S/SP** do not have the key. The key operates switching simultaneously.
- key:** It is used when entering parameter groups, returning to RUN mode, moving parameter, saving the set value.
- key:** It is used when entering the set value changing mode and moving or changing up/down digit.
- Digital input key:** When pressing + keys for 3 sec. at the same time, it operates the function (RUN/STOP, alarm clear, auto tuning) set at digital input key [di - v] in parameter 5 group.
- PC loader port:** It is the PC loader port for serial communication to set parameter with DAQMaster installed in PC. Use this for connecting SCM-US (USB/Serial converter, sold separately).

Installation


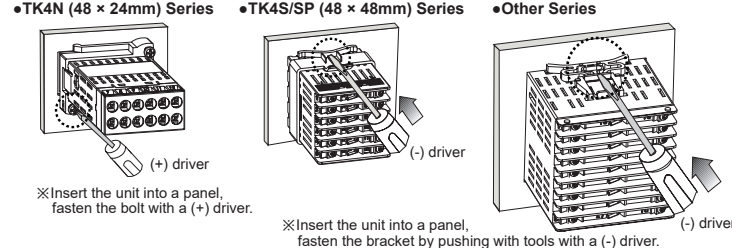


Connections


※Standard model has shaded terminals only.
※When the operation mode of heating&cooling OUT2 relay output model is heating or cooling control, the OUT2 is usable as alarm output 3 (except TK4N Series).
※When the operation mode of heating&cooling OUT2 current output model is heating or cooling control, the OUT2 is usable as transmission output 2.
※Use terminals of size specified below.

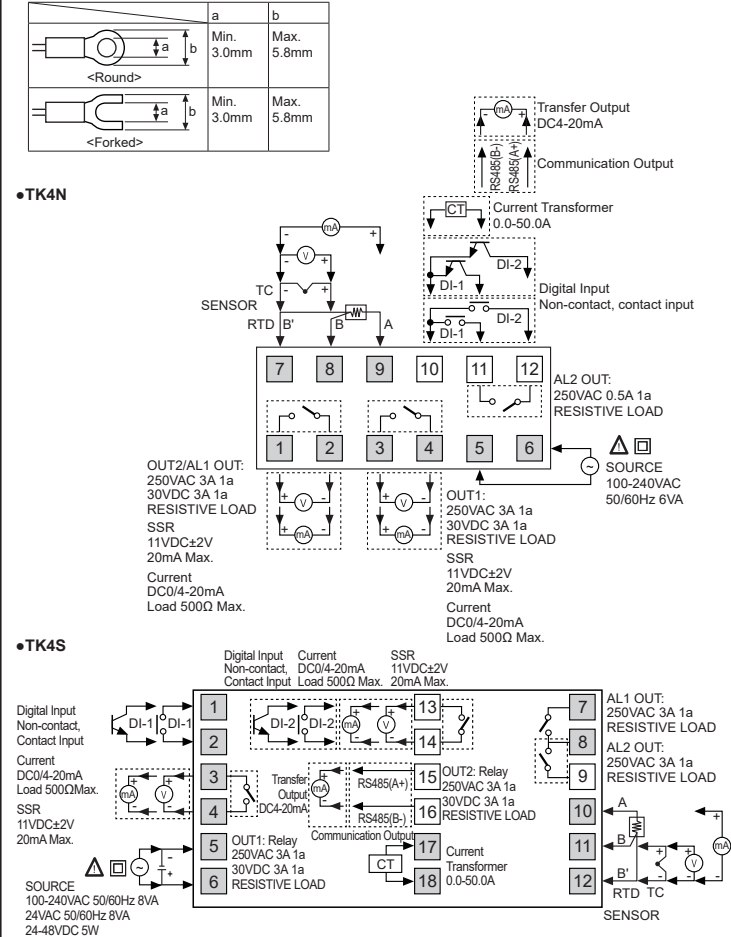


Dimensions

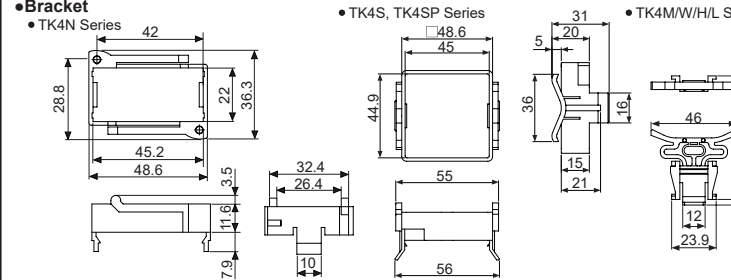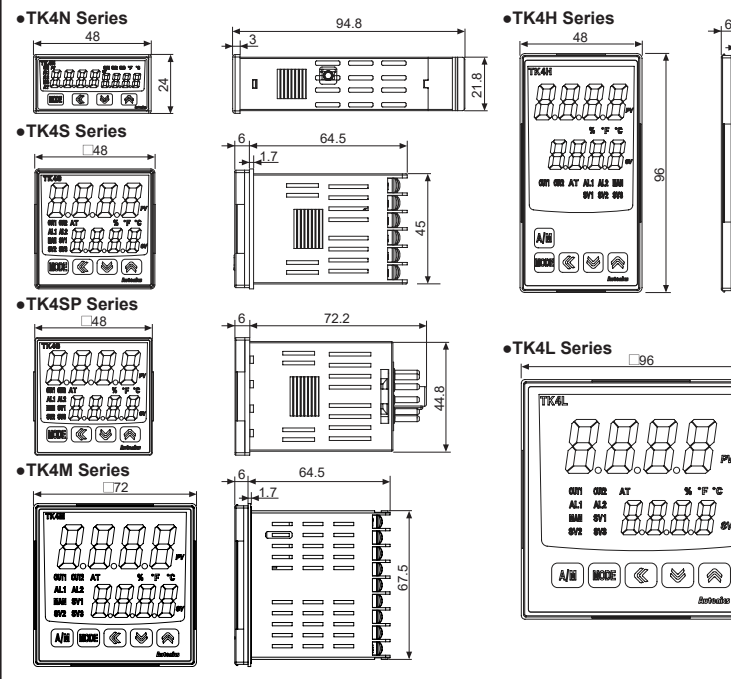


TK4SP

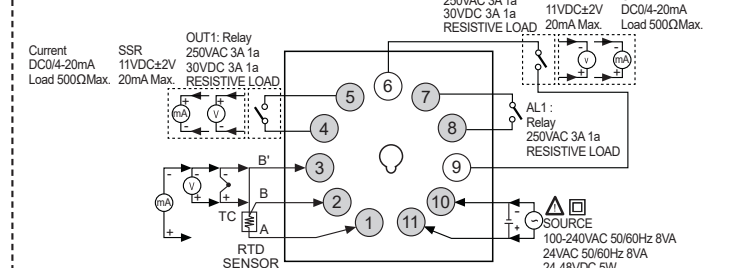


TK4M

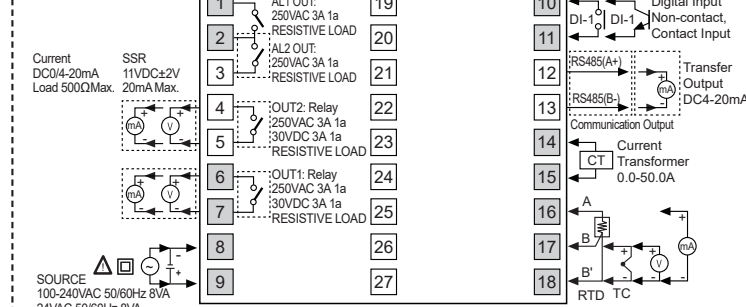

TK4H, TK4W, TK4L

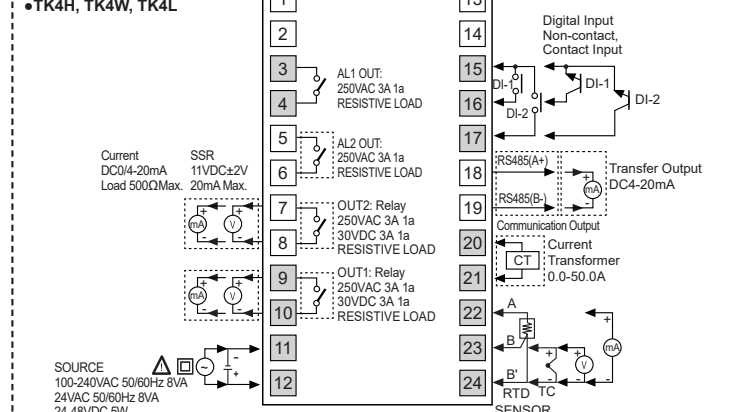


Terminal cover (sold separately)

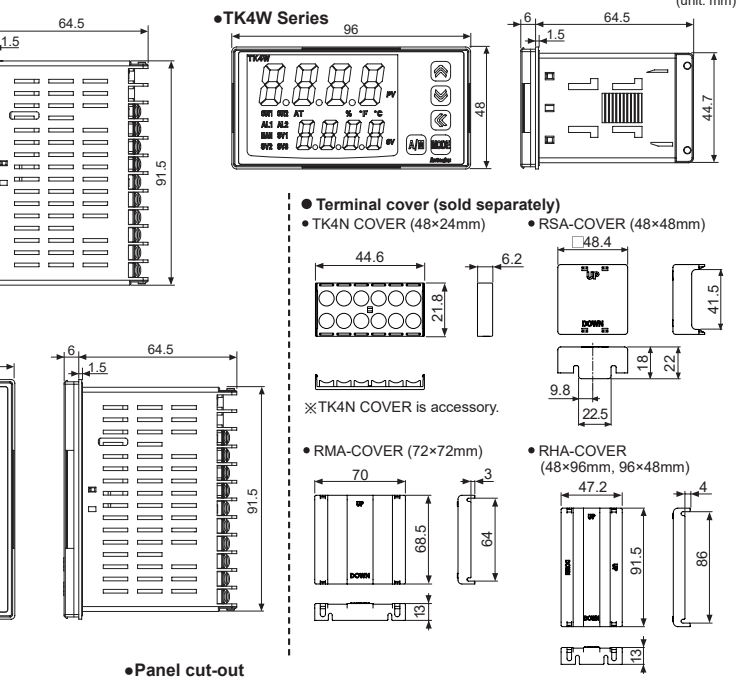

Panel cut-out

| Model | Size | A | B | C | D |
|----------|------|-----|--------------------|--------------------|------|
| TK4N | 55 | 37 | 45 ^{+0.3} | 22 ^{+0.3} | 91.5 |
| TK4S | 65 | 65 | 45 ^{+0.3} | 45 ^{+0.3} | 91.5 |
| TK4S (P) | 65 | 65 | 45 ^{+0.3} | 45 ^{+0.3} | 91.5 |
| TK4M | 90 | 90 | 68 ^{+0.3} | 68 ^{+0.3} | 91.5 |
| TK4H | 65 | 115 | 45 ^{+0.3} | 92 ^{+0.3} | 91.5 |
| TK4W | 115 | 65 | 92 ^{+0.3} | 45 ^{+0.3} | 91.5 |
| TK4L | 115 | 115 | 92 ^{+0.3} | 92 ^{+0.3} | 91.5 |

Flow Chart for Setting Group

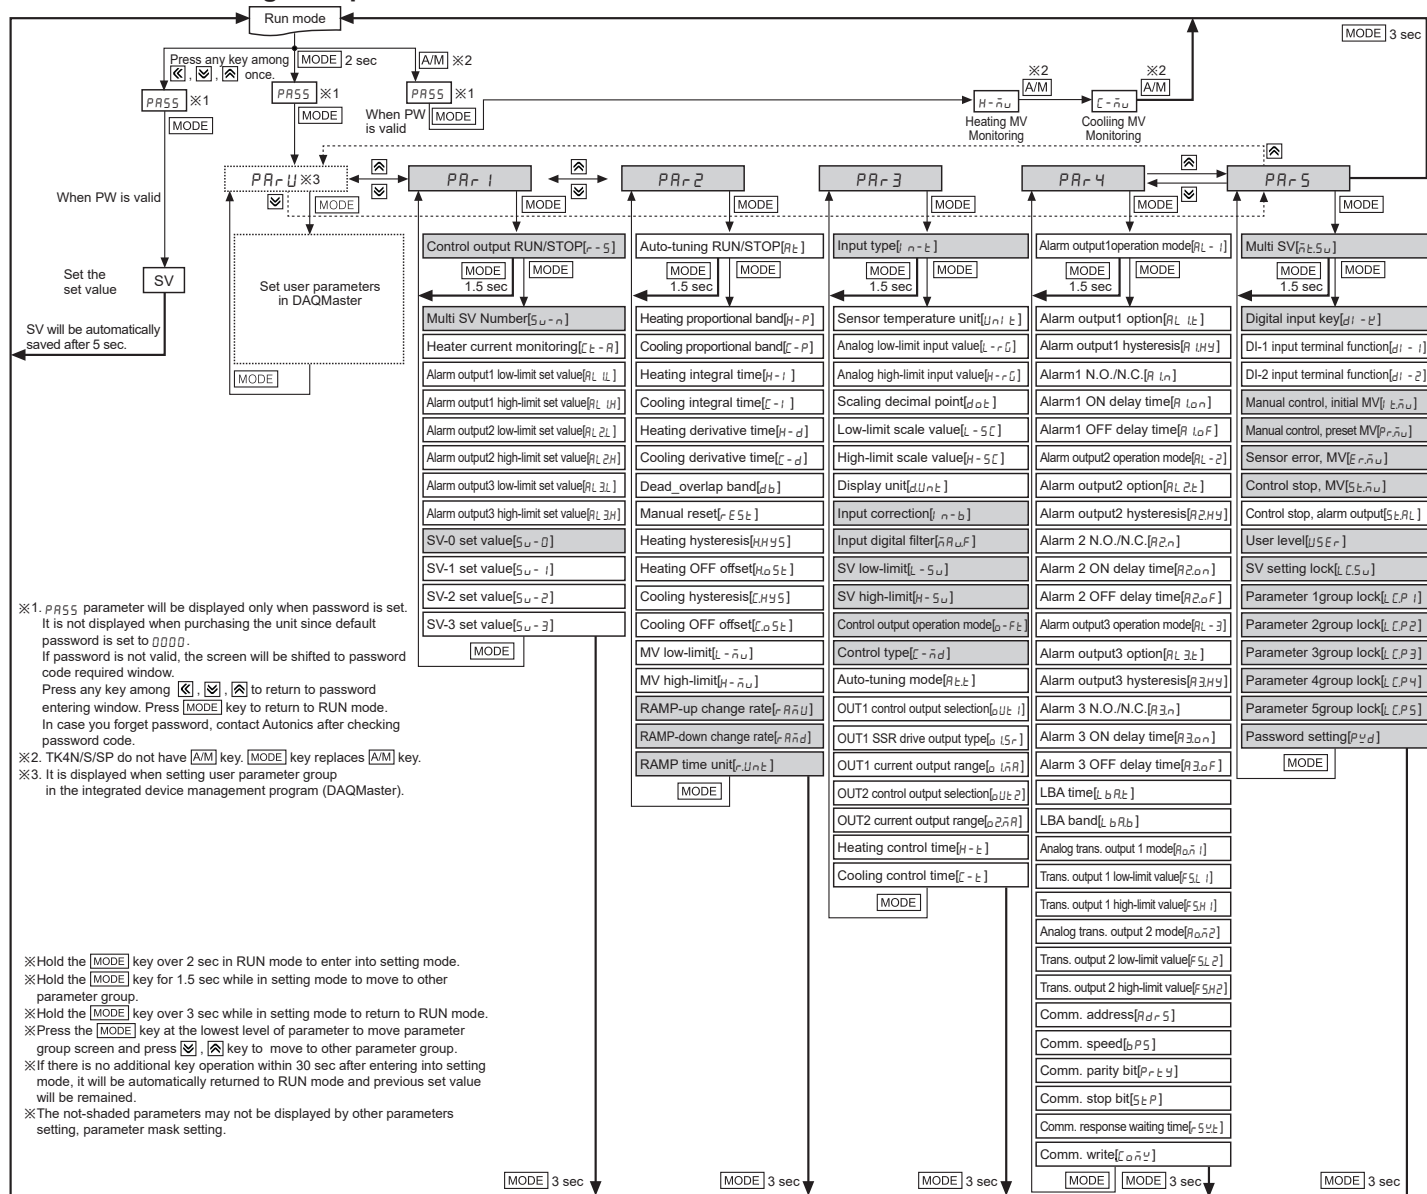


Input Types and Range

| Input type | Decimal point | Display | Input range (°C) | Input range (°F) |
|--------------|----------------------|-----------------|------------------|---|
| Thermocouple | K (CA) | 1 | -200 to 1350 | -328 to 2463 |
| | J (IC) | 0.1 | -199.9 to 999.9 | -328 to 1472 |
| | E (CR) | 0.1 | -199.9 to 800.0 | -199.9 to 999.9 |
| | T (CC) | 1 | -200 to 400 | -328 to 752 |
| | B (PR) | 1 | -199.9 to 400.0 | -199.9 to 752.0 |
| | R (PR) | 1 | 0 to 1800 | 32 to 3272 |
| | S (PR) | 1 | 0 to 1750 | 32 to 3182 |
| | N (NN) | 1 | 0 to 1750 | 32 to 3182 |
| | C (TT) ^{*1} | 1 | -200 to 1300 | -328 to 2372 |
| | G (TT) ^{*2} | 1 | 0 to 2300 | 32 to 4172 |
| RTD | L (IC) | 0.1 | -200 to 900 | -328 to 1652 |
| | U (CC) | 0.1 | -199.9 to 900.0 | -199.9 to 999.9 |
| | Platine II | 1 | -200 to 400 | -328 to 752 |
| | Cu 50Ω | 0.1 | -199.9 to 200.0 | -199.9 to 392.0 |
| | Cu 100Ω | 0.1 | -199.9 to 200.0 | -199.9 to 392.0 |
| | JPt 100Ω | 1 | -200 to 650 | -328 to 1202 |
| | DPT 50Ω | 0.1 | -199.9 to 650.0 | -199.9 to 999.9 |
| | DPT 100Ω | 1 | -200 to 650 | -328 to 1202 |
| | Nickel 120Ω | 0.1 | -199.9 to 650.0 | -199.9 to 999.9 |
| | Nickel 120Ω | 1 | -80 to 200 | -112 to 392 |
| Analog | Voltage | 0-10V | R _{u1} | -1999 to 9999 (Display point will be changed according to decimal point position.) |
| | | 0-5V | R _{u2} | |
| | | 1-5V | R _{u3} | |
| | | 0-100mV | R _{u4} | |
| Current | 0-20mA | R _{a1} | | |
| | 4-20mA | R _{a2} | | |

*1: C (TT): Same temperature sensor as former W5 (TT)
*2: G (TT): Same temperature sensor as former W (TT)


Initial Display When Power ON

When power is supplied, whole display parts flash for 1 sec. Afterwards, model name and input sensor type will be flash twice and then it enters into RUN mode.

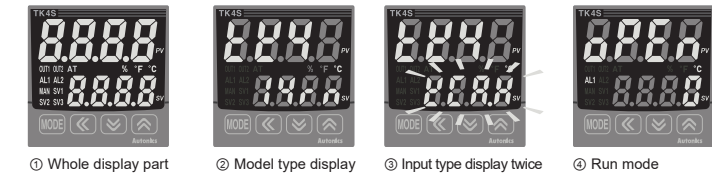

Set Value (SV) Setting

You can set the temperature to control with the MODE, PR55, and PR56 keys. Set range is within SV low-limit value [L - 5u] to SV high-limit value [H - 5u].

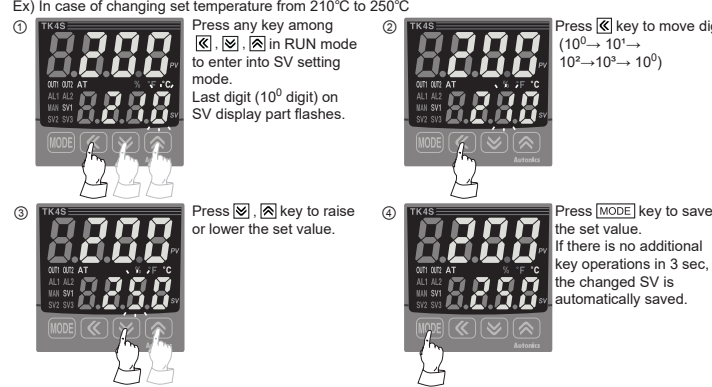


Parameter Reset

Press MODE + PR55 + PR56 to reset all parameters in memory to default value. Set [n1] parameter to '4E5' to reset all parameters. In case password function is on, it is required to enter valid password to reset parameters. Password is also reset.


Parameter Mask

This function is able to hide unnecessary parameters to user environment or less frequently used parameters in parameter group. You can set this in the integrated device management program (DAQMaster). Masked parameters are not only displayed. The set value of masked parameters are applied. For more information, refer to the DAQMaster user manual. Visit our website (www.autonics.com) to download the DAQMaster program and the user manual.

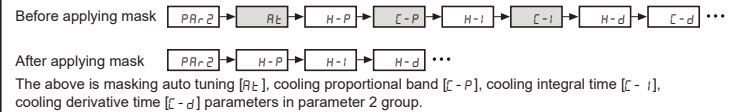

User Parameter Group [PR-U] Setting

This function is able to set the frequently used parameters to the user parameter group. You can quickly and easily set parameter settings. User parameter group can have up to 30 parameters in the integrated device management program (DAQMaster). For more information, refer to the DAQMaster user manual. Visit our website (www.autonics.com) to download the DAQMaster program and the user manual.

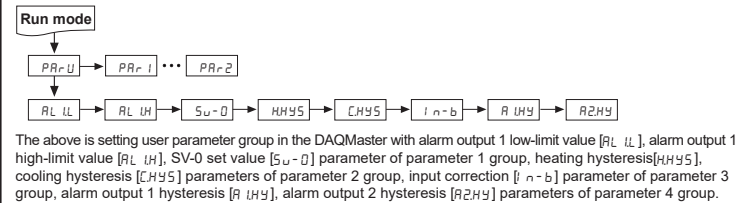

The above is setting user parameter group in the DAQMaster with alarm output 1 low-limit value [RL -> RL], alarm output 1 high-limit value [RL -> RL], SV-0 set value [SV - 0] parameter of parameter 1 group, heating hysteresis [HHYS], cooling hysteresis [CHYS] parameters of parameter 2 group, input correction [I - n - b] parameter of parameter 3 group, alarm output 1 hysteresis [R - HY], alarm output 2 hysteresis [R2HY] parameters of parameter 4 group.

Alarm

Alarm operation

| Mode | Name | Alarm operation | Description |
|------|---------------------------------|--|--|
| oFF | — | — | No alarm output |
| dUCC | Deviation high-limit alarm | OFF H ON SV PV 100°C 110°C High deviation: Set as 10°C High deviation: Set as -10°C | If deviation between PV and SV as high-limit is higher than set value of deviation temperature, the alarm output will be ON. |
| JJdU | Deviation low-limit alarm | ON H OFF PV SV 90°C 100°C Low deviation: Set as 10°C Low deviation: Set as -10°C | If deviation between PV and SV as low-limit is higher than set value of deviation temperature, the alarm output will be ON. |
| JdUc | Deviation high/low-limit alarm | ON H OFF H ON PV SV PV SV 90°C 100°C 120°C Low deviation: Set as 10°C, High deviation: Set as 20°C | If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be ON. |
| CdUJ | Deviation high/low-limit alarm | OFF H ON H OFF PV SV PV SV 90°C 100°C 120°C Low deviation: Set as 10°C, High deviation: Set as 20°C | If deviation between PV and SV as high/low-limit is lower than set value of deviation temperature, the alarm output will be OFF. |
| PuCC | Absolute value high-limit alarm | OFF H ON H ON PV SV PV SV 90°C 100°C Absolute-value: Set as 90°C Absolute-value: Set as 110°C | If PV is higher than the absolute value, the output will be ON. |
| JJPu | Absolute value low-limit alarm | ON H OFF H OFF PV SV PV SV 90°C 100°C Absolute-value: Set as 90°C Absolute-value: Set as 110°C | If PV is lower than the absolute value, the output will be ON. |
| LbR | Loop break alarm | — | It will be ON when it detects loop break. |
| 5bR | Sensor break alarm | — | It will be ON when it detects sensor disconnection. |
| HbR | Heater break alarm | — | It will be ON when CT detects heater break. |

*H: Alarm output [] hysteresis [R - HY]

Alarm option

| Mode | Name | Description |
|--------|------------------------------------|--|
| RL - A | Standard alarm | If it is an alarm condition, alarm output is ON. If it is a clear alarm condition, alarm output is OFF. |
| RL - b | Alarm latch | If it is an alarm condition, alarm output is ON and maintains ON status. |
| RL - C | Standby sequence 1 | First alarm condition is ignored and from second alarm condition, standard alarm operates. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, standard alarm operates. |
| RL - d | Alarm latch and standby sequence 1 | If it is an alarm condition, it operates both alarm latch and standby sequence. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, alarm latch operates. |
| RL - E | Standby sequence 2 | First alarm condition is ignored and from second alarm condition, standard alarm operates. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, standard alarm operates. |
| RL - F | Alarm latch and standby sequence 2 | Basic operation is same as alarm latch and standby sequence 1. It operates not only by power ON/OFF, but also alarm set value, or alarm option changing. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, alarm latch operates. |

*Condition of re-applied standby sequence for standby sequence 1, alarm latch and standby sequence 1: Power ON
Condition of re-applied standby sequence for standby sequence 2, alarm latch and standby sequence 2: Power ON, changing set temperature, alarm temperature [RL - 1, RL - 2] or alarm operation [RL - 1, RL - 2], switching STOP mode to RUN mode.

Factory Default

| SV setting group [SV] | | | | Password input parameter | | | |
|---------------------------------|-----------------|-----------|-----------------|---------------------------------|-----------------|-----------|-----------------|
| Parameter | Factory default | Parameter | Factory default | Parameter | Factory default | Parameter | Factory default |
| SV | 0 | PR55 | 0001 | | | | |
| Parameter 1 group [PR-1] | | | | Parameter 2 group [PR-2] | | | |
| Parameter | Factory default | Parameter | Factory default | Parameter | Factory default | Parameter | Factory default |
| r - 5 | rUn | RL LH | 1550 | RL 3H | 1550 | SV - 3 | 0000 |
| SV - n | SV - 0 | RL 2L | 1550 | SV - 0 | 0000 | | |
| Ct - A | 00 | RL 2H | 1550 | SV - 1 | 0000 | | |
| RL 1L | 1550 | RL 3L | 1550 | SV - 2 | 0000 | | |
| Parameter 3 group [PR-3] | | | | Parameter 4 group [PR-4] | | | |
| Parameter | Factory default | Parameter | Factory default | Parameter | Factory default | Parameter | Factory default |
| i - n - t | ECRH | H - 5C | 1000 | o - Ft | HEAt | o - l5r | 5tnd |
| Un1 t | oC | dUn t | o' o | | H - C | o - lAR | 4 - 20 |
| L - rG | 0000 | i - n - b | 0000 | | C - nd | Pi d | oUt 2 |
| H - rG | 1000 | nARuF | 0001 | | PP | o - 2AR | 4 - 20 |
| d - oE | 00 | L - 5u | -200 | | At t | tUn I | H - t |
| L - 5C | 0000 | H - 5u | 1350 | | oUt 1 | CUr r | C - t |

User Manual

For the detail information and instructions, please refer to user manual and user manual for communication, and be sure to follow cautions written in the technical descriptions (catalog, homepage). Visit our homepage (www.autonics.com) to download manuals.

Comprehensive Device Management Program[DAQMaster]

DAQMaster is a comprehensive device management software for setting parameters and monitoring processes. DAQMaster can be downloaded from our website at www.autonics.com.

| Item | Minimum specifications |
|------------|--|
| System | IBM PC compatible computer with Pentium III or above |
| Operations | Windows 98/NT/XP/Vista/7/8/10 |
| Memory | 256MB+ |
| Hard disk | 1GB+ of available hard disk space |
| VGA | Resolution: 1024x768 or higher |
| Others | RS232C serial port (9-pin), USB port |

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor.
- For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing.
- After changing the input sensor, modify the value of the corresponding parameter.
- 24VAC, 24-48VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Do not overlapping communication line and power line.
- Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat.
- For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Pollution degree 2
 - Altitude max. 2,000m
 - Installation category II

Major Products

- Photodiode Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buttons
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO₂, Nd:YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

Autonics corporation
http://www.autonics.com

■ HEADQUARTERS:
18, Bansong-ro 513beon-gil, Haendae-gu, Busan, South Korea, 48002
TEL: 82-51-519-3232
E-mail: sales@autonics.com

DRW170598AB